

Aussie

LIFT & SHIFT

Ph: 13001HOIST


www.aussiehoist.com.au

SYDNEY 12 Loftus St Arncliffe 2205


MELBOURNE 59 Tanbridge Way Warranwood 3134

MABER MBA1800 & MBA1800R

ELEVATION

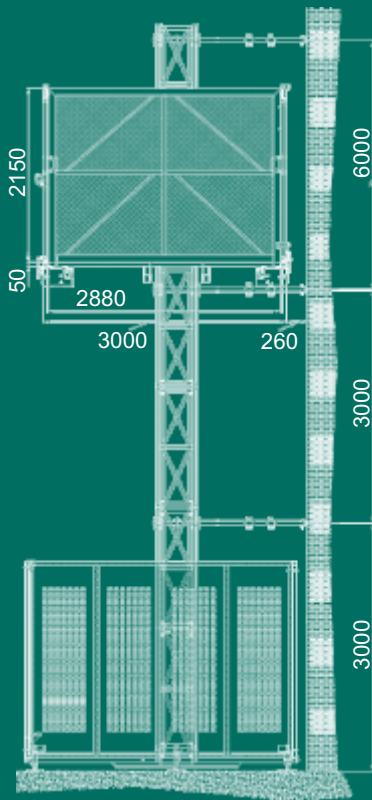

PLAN

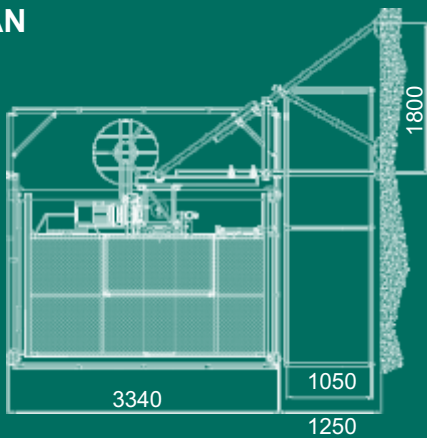

Low entry height of 400mm means you can load from the base, no pit required.

Maber Personal Hoists	Capacity (kg)	Platform Size (m)	Ramp Size (m)	Platform height to Ground (mm)	Power Outlet Required	Power Circuit Required	Min Generator	Ground Footprint Required (m)	Min Penetration Size (m)	Mast** Location	3rd ramp size (m)	Stowed Height (m)	Min Door size*** (m)
MBA1800	1800	3 x 1.5	1.4 x 0.35	350	50amp 5 pin 415V	Min 16mm ² cable 60A C/B	50KVA 415V	3.2* x 3.4	2.7* x 3.4	Left	n/a	3.2	3.2 x 2.7
MBA1800R	1800	3 x 1.5	1.4 x 0.35	350	50amp 5 pin 415V	Min 16mm ² cable 60A C/B	70KVA 415V	3.2* x 3.4	2.7* x 3.4	Left	n/a	3.2	3.2 x 2.7

*Is distance along the edge of structure. This is the side where materials are offloaded from hoist to building. The other dimension is measured out or away from the building.

** This is specified when standing outside of the building looking towards the building at the location of the hoist (when standing within the building it is opposite).

*** This is with machine either folded up, or separated to the smallest possible component for transport.